

SET UP SCREENING

CONFIGURATION

1 DEDICATED COMPUTER (Tower + Screen)

Minimum System Requirements :

- A high-speed internet connection
- No anti-virus software other than Windows anti-virus software
- Operating System: Windows 8 or higher
- Processor: Intel i3 or higher, running at 3 GHz
- RAM: 4 GB of RAM
- Disk Space: Allow 500 GB minimum
- Resolution: 1280 x 720 and higher

2 VIDEOPROJECTOR

3 AUDIO BROADCAST SYSTEM

- 3a - Amplifier
- 3b - Subwoofer
- 3c - Speakers

4 SCREEN

Choose a screen at least 3 meters wide.


It should be positioned at least 1.2 meters above the ground.

CONTACTS

PLANET FITNESS VIRTUAL PLAYER

Powered by MG Instore Media
Phone: +33 (0)4 42 24 14 32

Email : contact@mg-instore.com
www.lesmills.fr/virtual

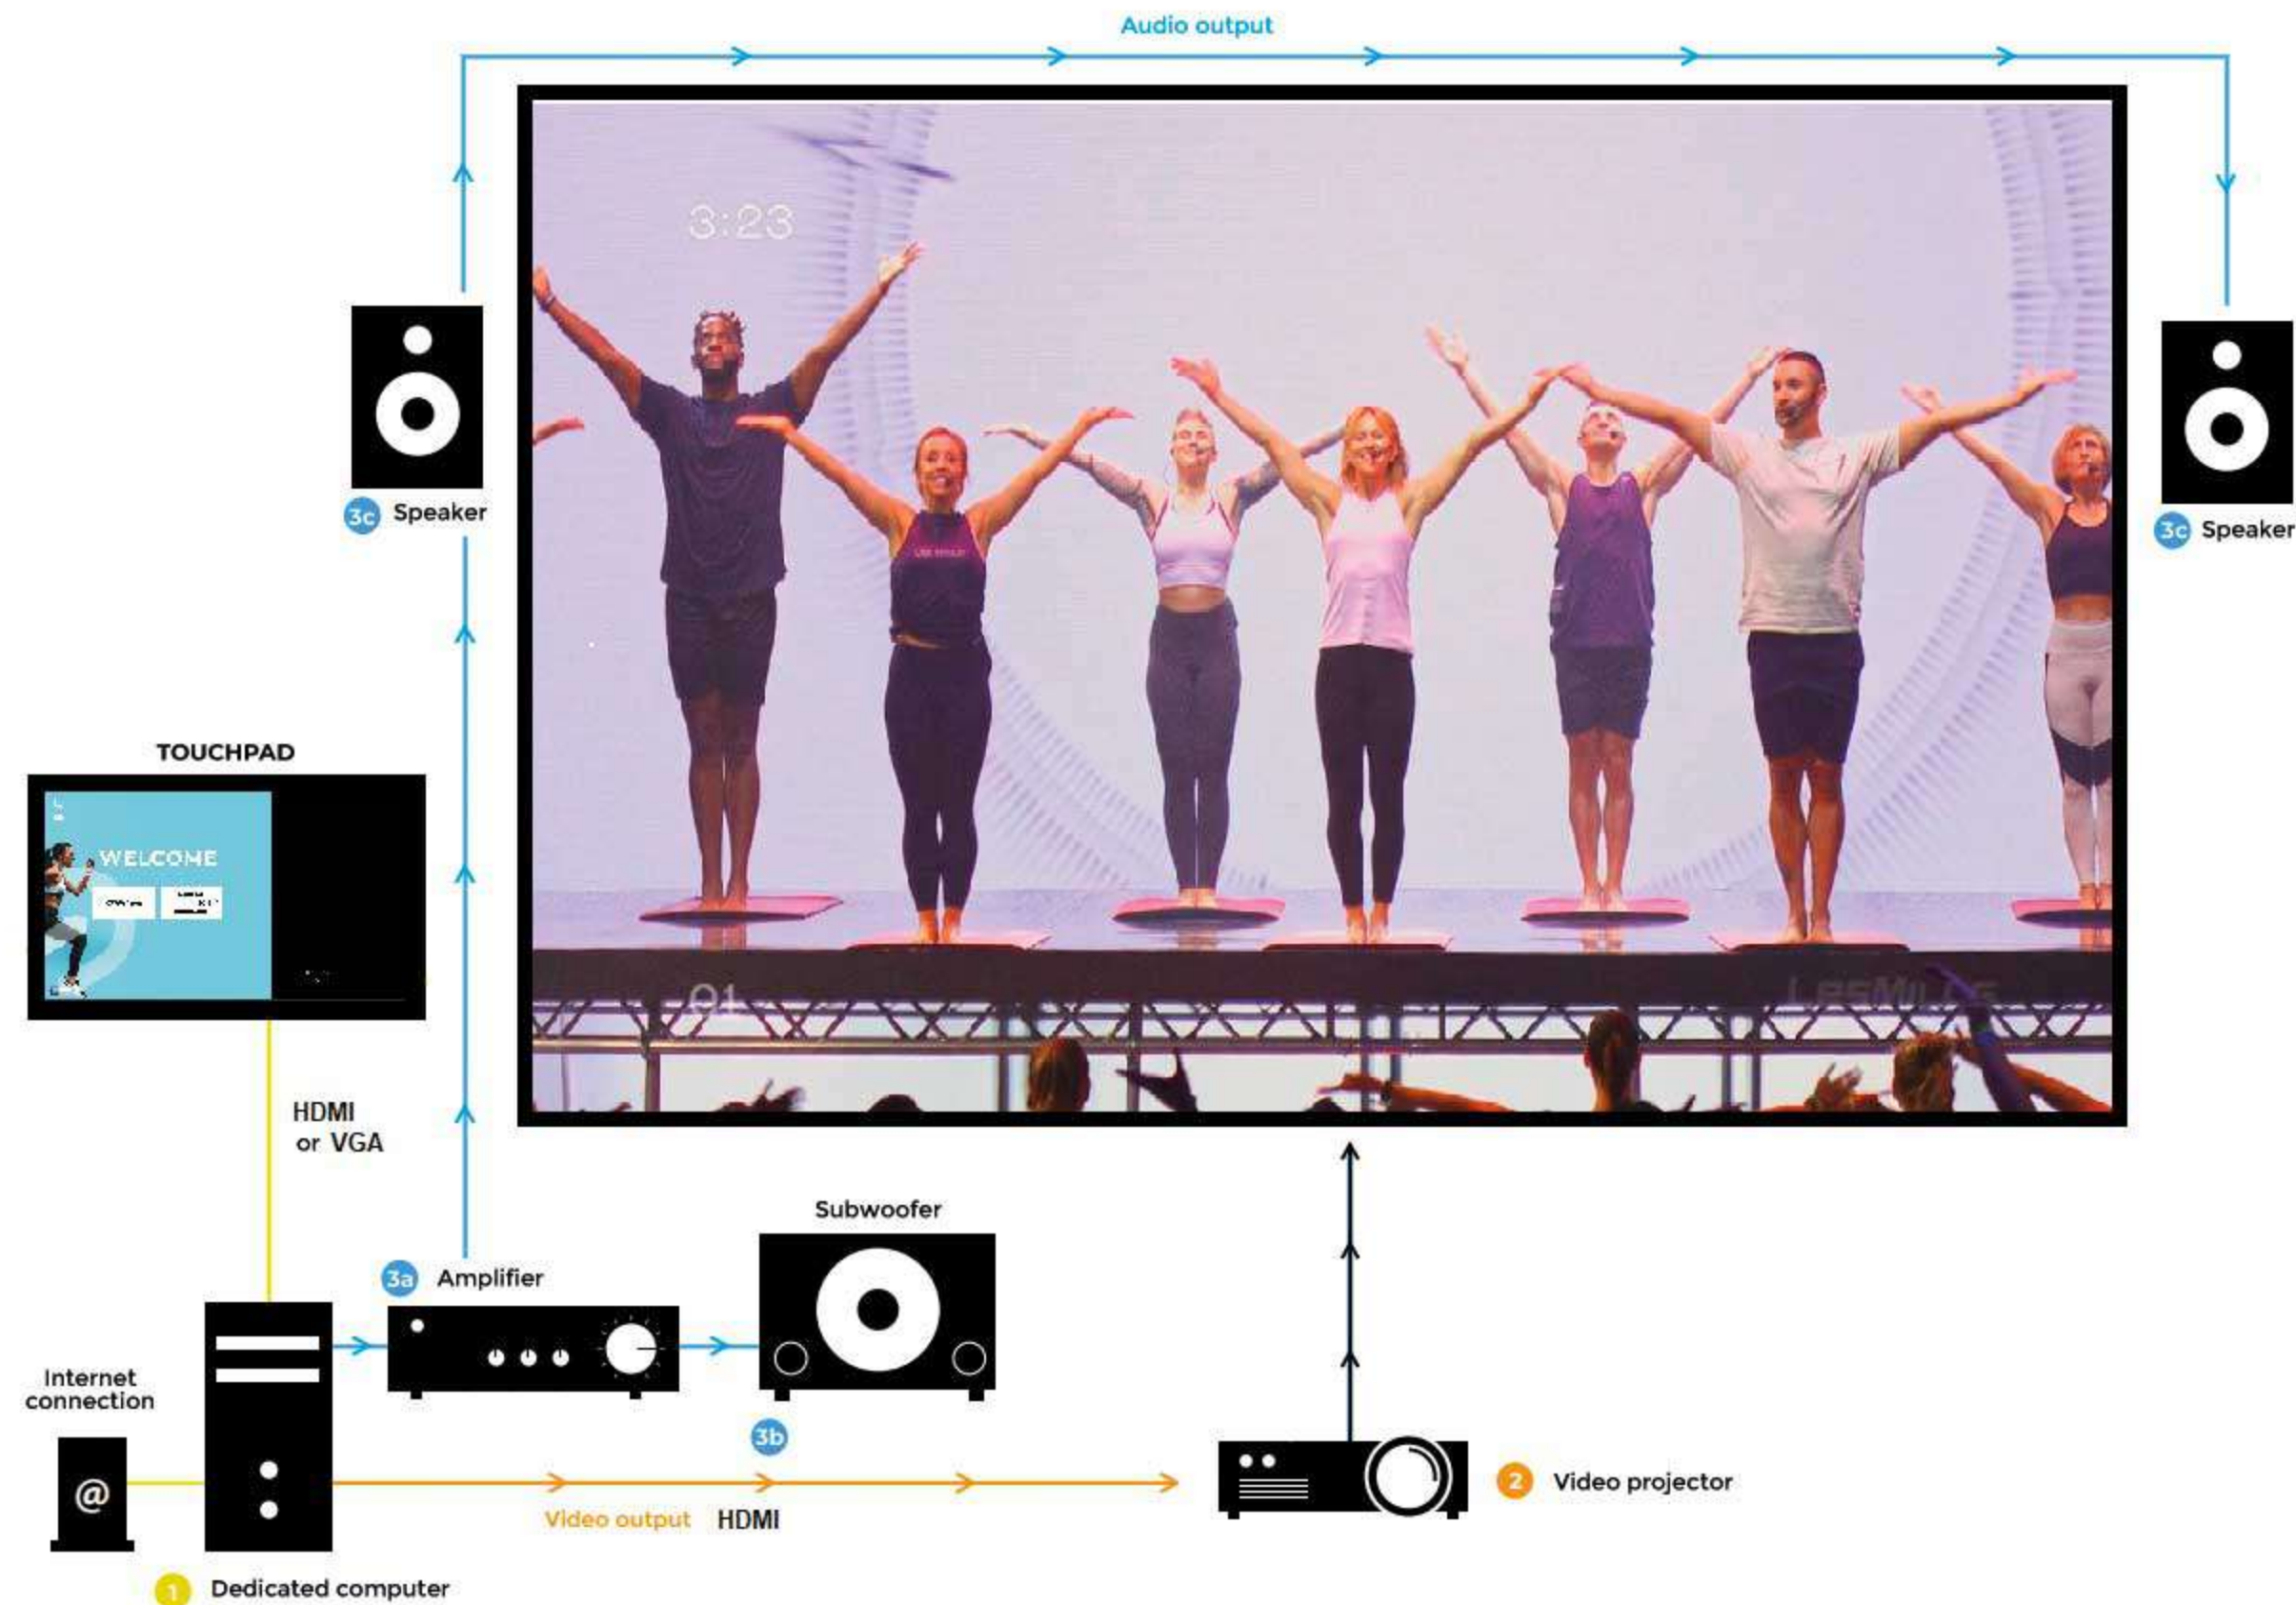

SETTING THE DUAL DISPLAY :

In WINDOWS:

- Right click on the desktop
- In "Display settings"
- At the very bottom of the window, in "Multiple displays" scroll down the list and select "Widescreen".

In the PLAYER:

- In the settings > button on the top left of the interface (character icon with a padlock)
- Define a personal access code to the parameters
- At the bottom right of the settings window, in "Video Display" select "Screen 2".

SOUND SETTINGS :

In WINDOWS:

- Access the Windows sound settings.
- On the right in the task bar, click on the small speaker
- A small window opens, click on the arrow at the top right, a drop-down list appears.
- Select the sound output (PC or Sono)